



BT-FLS15550

ITEM	PARTS NO	PARTS NAME
101	BTP11371-0854701-1	DEFLECTOR
102	BTP2040100-04020-1	BOLT ASSY
103	BTP11369-0855201-1	CAP
104*	BTP2041104-03040-0	O - RING
105	BTP1136M-0850001-1	SAFETY STOPPER
106	BTP11337-0254704-1	SAFETY SPRING
107	BTP2040101-03110-7	HEX.SOC.HD.BOLT
108	BTP11368-0850002-1	HD.VALVE PISTON
109*	BTP2041108-06030-0	O - RING
110	BTP11380-0850001-1	CAP GASKET
111*	BTP11380-0850002-2	GASKET
112*	BTP1139J-0850001-2	DISCHARGE SHEET
113*	BTP2041104-02111-0	O - RING
114*	BTP11399-0850001-1	COLLAR
115*	BTP1139H-0850002-1	PISTON SHAFT
116*	BTP11329-0854701-1	PIN
117*	BTP11349-1320001-1	MAIN PISTON
118*	BTP2041108-06100-0	O - RING
119*	BTP11387-1130001-1	DRIVER
120*	BTP1134S-1324701-1	FIRING PIN DRAWBAR
121*	BTP11327-0854701-1	BUMPER
201	BTP2040101-02020-1	HEX.SOC.HD.BOLT
202	BTP113AR-0850001-1	Steel Cable
203	BTP11316-0854701-1	TRIGGER
204	BTP2040403-06040-0	PIN
205	BTP2040403-08090-0	PIN
206	BTP11398-0854701-1	LATCH SPRING BUSHING
301	BTP11384-0855204-1	GUN BODY
302	BTP1137K-0851302-1	HANDLE
303	BTP1137K-0851301-1	HANDLE A
304	BTP2040100-04010-0	BOLT ASSY
305	BTP1135V-0000010-1	AIR PLUG
306	BTP2040101-04090-1	HEX.SOC.HD.BOLT
401	BTP2040101-03121-2	HEX.SOC.HD.BOLT
402	BTP11326-0854701-2	BASE
403	BTP11351-1134701-1	DRIVER GUIDE COVER
404	BTP2040103-01010-0	FLAT HD.SCREW
405	BTP2040400-05320-0	SPRING PIN
406	BTP11303-1134701-1	DRIVER GUIDE

ITEM	PARTS NO	PARTS NAME
407	BTP2040102-03020-0	HALF ROUND HD.HEX.BOLT
408	BTP11389-1134701-1	MAGAZINE A
409	BTP2040101-03090-2	HEX.SOC.HD.BOLT
410	BTP11363-1134701-1	PUSHER
411	BTP11343-1134701-1	LATCH
412	BTP1135F-0684701-1	PUSHER CUSHION
413	BTP11304-1134701-1	MIDDLE STRIP
414	BTP11372-0070001-1	SPRING
415	BTP1131H-0074701-1	SPECIAL SCREW
416	BTP1136H-0851301-1	FIXED SUPPORT
417	BTP1135R-0850001-1	PROTECTIVE CUSHION
418	BTP2040103-04040-1	COUNTER SUNK SCREW
419	BTP2040101-04111-2	HEX.SOC.HD.BOLT
420	BTP1139M-0850002-2	HAMMER

The following parts are including in the BTPFLKIT1 parts kit:

104	110	113	119	
109	111	114		