



BT-MCN65P

ITEM	PARTS NO	PARTS NAME
1	BTP32206140766	Hex.Soc.Hd.Bolt
2	BTP20790000001	Bushing,Deflector
3	BTP20790010115	Deflector,Exhaust
4	BTP30105250866	Hex.Soc.Hd.Bolt
5A	BTP236400210B2	Cap
6	BTP23650130000	Cap, Gasket
7	BTP20970230001	Metal Shim
8	BTP20750140217	Piston Stopper
9	BTP20970160100	Head Valve Spring
10	BTP30700110000	O-Ring
11	BTP30700232000	O-Ring
12	BTP23650150000	Piston Head Valve
13	BTP21530250017	Seal
14	BTP30700018000	O-Ring
15A	BTP23640462000	Driver Assembly
16	BTP23640350000	Cylinder
17	BTP30700325000	O-Ring
18	BTP30700133000	O-Ring
19	BTP30700324000	O-Ring
20	BTP23650370000	Cylinder Spacer
21	BTP23650470015	Bumper
22A	BTP236506020C1	Body Assembly
23	BTP21630730000	Gasket
24	BTP216307400B2	End Cap
25	BTP30105200866	Hex.Soc.Hd.Bolt
26	BTP21630830009	Belt Hook
27	BTP30700246000	O-Ring
28	BTP20970840101	Cover Belt Hook
29	BTP33425000001	C-Ring
30	BTP30700079000	O-Ring
31	BTP20770900016	Valve
32	BTP30700081000	O-Ring
33	BTP30700002000	O-Ring
34	BTP30700201000	O-Ring
35	BTP20770910016	Valve Plunger
36	BTP30700071000	O-Ring
37	BTP23640960000	Spring
38	BTP30700080000	O-Ring
39	BTP20770920100	Plunger

ITEM	PARTS NO	PARTS NAME
40	BTP20770930016	Plunger Cap
41	BTP21632840115	Guide, Contact Trip
42A	BTP21630952259	Trigger Assembly
43	BTP30803260001	Spring Pin
44	BTP20770890101	Pin Trigger
45	BTP30700078000	O-Ring
46	BTP30700333000	O-Ring
47	BTP30700178000	O-Ring
48	BTP23641130066	Nose
49	BTP30106200266	Hex.Soc.Hd.Bolt
50	BTP21631540115	Guide,Safety Lever
51	BTP21631610101	Safety Guide
52	BTP21632810000	Upper Safety Lever(B)
53A	BTP23641481001	Upper Safety Lever Assy.
54	BTP23642970000	Spring
55	BTP23641490001	Spring,Safety
56	BTP30104060166	Hex.Soc.Hd.Bolt
57	BTP21633640101	Spring
58	BTP21631200000	Nail Stopper
59	BTP21631260115	Shaft Pin Nail Guide
60	BTP21633650001	Spring
61	BTP30104040166	Hex.Soc.Hd.Bolt
62	BTP21631450101	Safety Pin
63A	BTP23641521066	Safety Nose Assembly
64	BTP30104080266	Hex.Soc.Hd.Bolt
65	BTP21632070002	Mail Guide Liner
66	BTP23642050006	Magazine
67	BTP23642150015	Carriage
68	BTP23642130066	Pusher
69	BTP23642250001	Pin
70	BTP23641750012	Fastener Stopper
71	BTP31604080166	Hex.Soc.Hd.Bolt
72	BTP21692330001	Spring
73	BTP21632090100	Spiral Spring
74	BTP236421800A5	Magazine Cap
75	BTP30404100166	Hex.Soc.Hd.Bolt
76	BTP30604070001	Locknut
77	BTP30405120166	Hex.Soc.Hd.Bolt
78	BTP30605080001	Locknut

ITEM	PARTS NO	PARTS NAME
79	BTP21532060323	Nail Guide Liner
80	BTP23642170066	Bracket
81	BTP30900008001	Flat Washer
82	BTP30105180166	Hex.Soc.Hd.Bolt
83	BTP21631870001	Fixed Piece
84	BTP30104100566	Hex.Soc.Hd.Bolt
85	BTP23651550015	Safety Cover
86	BTP20971270001	Shaft Pin Nail Guide
87	BTP30700329000	O-Ring

BTPMCN65PKIT1	Seal Kit	(6-7, 10-11, 14, 17-19)
BTPMCN65PKIT2	Trigger Assembly	(30-40)