



ITEM	PARTS NO	PARTS NAME
3	BTPJHS0525BWF	HEX.SOC.HD.BOLT
4A	BTPA16600402A	CAP ASM.
4	BTPA16600402	CAP
5	BTPF15000501	SEAL
6	BTPG15000601	SPRING
8	BTPID1690W270	O-RING
9	BTPF15000901	PISTON HEAD VALVE
10	BTPID3500W210	O-RING
11	BTPF15001101	SEAL
12	BTPID2770W350	O-RING
16A	BTPH25601601A	DRIVER ASSEMBLY
17	BTPF15401703	COLLAR
18	BTPC16601801	CYLINDER
19	BTPD15405201	SUPPORT PLATE
20	BTPF15402001	BUMPER
21	BTPD25602101	SET PLATE
22	BTPF15602201	GASKET
23	BTPA25602301	BODY
30	BTPE25603001	CORE TRIP
31	BTPE12604101	SPACER
32	BTPF15403202	RUBBER GRIP
33	BTPJSS0406BF	SET SCREW
34	BTPJHS0530BWF	HEX.SOC.HD.BOLT
35	BTPJRP040P20D	ROLLED PIN
36A	BTPE25603601A	NOSE COVER ASM.
36	BTPE25603601	NOSE COVER
37	BTPE25603701	UPPER SAFETY LEVER
38	BTPJES0300W	E-RING
39	BTPD18803901	SAFETY LEVER
40	BTPF18804001	RUBBER PAD
41A	BTPB25604101A	MAGAZINE ASM.
41	BTPB25604101	MAGAZINE
42	BTPJUS0608BF	UM.HD.BOLT
43	BTPF15604301	PUSHER GUIDE
44	BTPG19002501	SPRING
45	BTPD15604501	PUSHER
45A1	BTPD15604501A1	PUSHER ASM.
48	BTPJRP030P23	ROLLED PIN
49	BTPF25604901	MAGAZINE COVER
50	BTPD18805002	NAIL STOPPER
51	BTPJUS0410BF	UM.HD.BOLT
52A	BTPD25005201A	NOSE COVER LOCK ASM.
53	BTPJRP030P16	ROLLED PIN
54	BTPD15605201	NAIL GUIDE LINER
55	BTPJLN0400N	LOCK NUT
57	BTPJUS0612BF	UM.HD.BOLT
59A	BTPG15606201A	SPIRAL SPRING ASM.
61	BTPJUS0406BF	UM.HD.BOLT
62	BTPJRP030P20	ROLLED PIN
63	BTPF25606301	EXHAUST FILTER
64	BTPJCS1900W	C-RING
65	BTPF13806701	HOOK

ITEM	PARTS NO	PARTS NAME
66	BTPD25606601	EXHAUST COVER
67A	BTPH17506702A	ADJ. BOLT
68	BTPG13809201	SPRING
69	BTPG19005801	SPRING
71	BTPJRP030P30	ROLLED PIN
80	BTPF19008502	PAD
81	BTPJRP030P20	ROLLED PIN
82A2	BTPF16508203A2	SWITCH ASM.
86A	BTPF13808602A	TRIGGER ASSEMBLY
90	BTPF13806201	TRIP GUIDE
91	BTPH15708901	SET SHAFT
92	BTPE19006803	CONTACT TRIP BLOCK
93	BTPJRP030P12	ROLLED PIN
94	BTPF14110001	PLASTIC WASHER
95	BTPF15709401	ADJ. WHEEL

The following parts are included in the BTPNSK1660002 parts kit:

5	6	8	10	11	12
22					