



111.07.11

ITEM	PARTS NO	PARTS NAME
3	BTPJHS0518BWF	HEX.SOC.HD.BOLT
4A	BTPA15600202A1	CAP ASM.
4	BTPA15600202	CAP
5	BTPF15000501	SEAL
6	BTPG15000601	SPRING
8	BTPID1690W270	O-RING
9	BTPF15000901	PISTON HEAD VALVE
10	BTPID3500W210	O-RING
11	BTPF15001101	SEAL
12	BTPID2770W350	O-RING
14A1	BTPH24301401A1	DRIVER ASSEMBLY
17	BTPF15401703	COLLAR
18	BTPC15401801	CYLINDER
19	BTPD15405201	SUPPORT PLATE
20	BTPF15402001	BUMPER
21	BTPD12502402	SET PLATE
22	BTPF15602201	GASKET
23	BTPA15402306	BODY
24	BTPJRP030P20	ROLLED PIN
25	BTPJRP030P30	ROLLED PIN
26	BTPF19008502	PAD
28	BTPG13809202	SPRING
32	BTPF15403203	RUBBER GRIP
35	BTPE24303501	DRIVER GUIDE PLATE
36	BTPJRP040P24DS	ROLLED PIN
37	BTPJHS0522BF	HEX.SOC.HD.BOLT
38	BTPE24303801	SET BLOCK
39	BTPE24303901	NOSE
40A	BTPB24304002A1	MAGAZINE ASM.
40	BTPB24304002	MAGAZINE
41	BTPJHS0418BWF	HEX.SOC.HD.BOLT
42	BTPJRP040P12	ROLLED PIN
47	BTPJRP030P06	ROLLED PIN
48	BTPJLN0400N	LOCK NUT
49A	BTPF15404901A	SWITCH ASSEMBLY
50	BTPH16409801	SPACER
51	BTPJHS0512BWF	HEX.SOC.HD.BOLT
54	BTPG17105401	SPRING
55	BTPE24305501	STOPPER
56	BTPJ17105601	UM.HD.BOLT
61A	BTPF24306102A	PUSHER GUIDE
62	BTPG15606204	SPIRAL SPRING
63	BTPH14206302	SPRING LATCH
64	BTPG19002501	SPRING
65	BTPF19006501	TRIP GUIDE
66	BTPD24306601	UPPER SAFETY LEVER
67A	BTPH24306701A	ADJ. BOLT
68	BTPD24306801	SAFETY LEVER
69A	BTPF19006203A	TRIGGER ASSEMBLY
70	BTRJES0400W	E-RING
72	BTPE24307201	CLAMPING PLATE
73	BTPD15408001	EXHAUST COVER

ITEM	PARTS NO	PARTS NAME
74	BTPF24307401	PLASTIC SUPPORT
75	BTPF13806701	HOOK
76	BTPJCS1900W	C-RING
77	BTPJUS0406BF	UM.HD.BOLT
78	BTPJHS0516BWF	HEX.SOC.HD.BOLT

This tool uses the following parts kits: BTPNSK1660002 & BTPNSK2430008

The following parts are included in the BTPNSK1660002 parts kit:

5	6	8	10 (x2)	11	12
22					

The following parts are included in the BTPNSK2430008 parts kit:

49A					