



110.03.18

ITEM	PARTS NO	PARTS NAME
1	BTPJUS0606BF	UM.HD.BOLT
2	BTPJFW061210	FLAT WASHER
3	BTPF13200301	EXHAUST COVER
4	BTPJHS0520BF	HEX.SOC.HD.BOLT
5	BTPF15000501	SEAL
6	BTPG15000601	SPRING
7A	BTPA13800702A	CAP ASM.
7	BTPA13800702	CAP
8	BTPID1690W270	O-RING
9	BTPF13800901	PISTON HEAD VALVE
10	BTPID3000W200	O-RING
11	BTPF13801101	SEAL
12	BTPID2270W350	O-RING
14A	BTPD14201401A	DRIVER ASSEMBLY
16	BTPF13801601	COLLAR
17	BTPD13801701	SUPPORT PLATE
15	BTPC13801501	CYLINDER
18	BTPF13801801	CYLINDER RING
19	BTPF13801903	BUMPER
20	BTPF13802001	GASKET
21	BTPD14202101	SET PLATE
23	BTPA13202002	BODY
24	BTPA13202401	COVER
25	BTPID4150W200	O-RING
32	BTPF14802701	RUBBER GRIP
33	BTPJRP030P30	ROLLED PIN
35	BTPJRP030P20	ROLLED PIN
36	BTPF13806201	TRIP GUIDE
37	BTPG19005801	SPRING
38	BTPH15708901	SET SHAFT
39	BTPE19006803	CONTACT TRIP BLOCK
40	BTPJRP030P12	ROLLED PIN
41A	BTPH13205602A	ADJ. BOLT
42	BTPF15709401	ADJ. WHEEL
43	BTPD14204301	SAFETY LEVER
44	BTPJES0300W	E-RING
45	BTPE14204501	DRIVER GUIDE PLATE
46	BTPJRP040P24DS	ROLLED PIN
47	BTPJHS0620BWF	HEX.SOC.HD.BOLT
48	BTPE14204801	SET BLOCK
49	BTPJHS0308SF	HEX.SOC.HD.BOLT
51	BTPB14205101	MAGAZINE COVER
52	BTPF14205201	SEWING COVER
54	BTPG17105401	SPRING
55	BTPE17105502	STOPPER
56	BTPJ17105601	UM.HD.BOLT
57A	BTPD14205701A	MAGAZINE ASM.
58	BTPG15606204	SPIRAL SPRING
59	BTPJRP030P20DS	ROLLED PIN
62A	BTPF14206201A	PUSHER GUIDE
63	BTPH14206302	SPRING LATCH
65A3	BTPF16508202A3	SWITCH ASM.

ITEM	PARTS NO	PARTS NAME
75	BTPJLN0600N	LOCK NUT
76	BTPJFW061210	FLAT WASHER
77	BTPJUS0512BF	UM.HD.BOLT
78	BTPF14207801	PLASTIC SUPPORT
79	BTPJUS0614BF	UM.HD.BOLT
80	BTPG19005801	SPRING
84	BTPG19005801	SPRING
86A1	BTPF15708602A1	TRIGGER ASSEMBLY
87	BTPF16002402	HOOK
88	BTPJCS2700W	C-RING
106A	BTPD14210601A	MAGAZINE ASM.

The following parts are included in the BTPNSK1420001 parts kit:

5	6	8	9	10	11
12	20				