



112.02.03

| ITEM | PARTS NO | PARTS NAME |
|------|----------------|--------------------|
| 3 | BTPJHS0525BWF | HEX.SOC.HD.BOLT |
| 4A | BTPA16600402A | CAP ASM. |
| 4 | BTPA16600402 | CAP |
| 5 | BTPF15000501 | SEAL |
| 6 | BTPG15000601 | SPRING |
| 8 | BTPID1690W270 | O-RING |
| 9 | BTPF15000901 | PISTON HEAD VALVE |
| 10 | BTPID3500W210 | O-RING |
| 11 | BTPF15001101 | SEAL |
| 12 | BTPID2770W350 | O-RING |
| 16A1 | BTPH16401602A1 | DRIVER ASSEMBLY |
| 17 | BTPF15401703 | COLLAR |
| 18 | BTPC16601801 | CYLINDER |
| 20 | BTPF15402001 | BUMPER |
| 21 | BTPD15102101 | SET PLATE |
| 22 | BTPF15602201 | GASKET |
| 23 | BTPA15402302 | BODY |
| 28 | BTPG19003901 | SPRING |
| 29 | BTPID0190W190 | O-RING |
| 30 | BTPH19004102 | PLUNGER |
| 31 | BTPID0350W150 | O-RING |
| 32 | BTPF15403203 | RUBBER GRIP |
| 33 | BTPID1400W178 | O-RING |
| 34 | BTPF19004301 | PLUNGER CAP |
| 36 | BTPJHS0522BF | HEX.SOC.HD.BOLT |
| 37 | BTPJHS0410BWF | HEX.SOC.HD.BOLT |
| 38 | BTPF16603801 | NOSE COVER |
| 39 | BTPJHS0408BW | HEX.SOC.HD.BOLT |
| 40 | BTPD16404001 | DRIVER GUIDE PLATE |
| 41 | BTPE16404103 | NOSE |
| 42 | BTPG15004201 | SPRING |
| 43 | BTPE16604301 | CORE TRIP |
| 44 | BTPF15004501 | RUBBER PAD |
| 45 | BTPJHS0408BW | HEX.SOC.HD.BOLT |
| 46 | BTPB16604601 | MAGAZINE |
| 46A1 | BTPB16604601A1 | MAGAZINE ASM. |
| 47 | BTPD16404701 | NAIL LINER |
| 49 | BTPJHS0412BWF | HEX.SOC.HD.BOLT |
| 50 | BTPF16605001 | MAGAZINE COVER |
| 52 | BTPD15405201 | SUPPORT PLATE |
| 53 | BTPJUT0406B | SELF TAPING SCREW |
| 54 | BTPJRP020P08 | ROLLED PIN |
| 55A | BTPF16605501A | PUSHER ASM. |
| 56 | BTPG16405601 | SPRING |
| 57 | BTPD16405703 | SPRING GUIDE |
| 58 | BTPD15505803 | CONTACT ARM |
| 58A | BTPD15505803A | CONTACT ARM ASM. |
| 59 | BTPH15005701 | ADJ. NUT |
| 60 | BTPE19006802 | CONTACT TRIP BLOCK |
| 63A | BTPH15005801A | ADJ. BOLT |
| 64 | BTPG15005901 | SPRING |
| 65 | BTPF19006501 | TRIP GUIDE |

| ITEM | PARTS NO | PARTS NAME |
|------|----------------|------------------|
| 67 | BTPJAP018 | BRASS SILENCER |
| 69A1 | BTPF15506903A1 | TRIGGER ASSEMBLY |
| 71 | BTPJRP030P30 | ROLLED PIN |
| 74 | BTPF15008301 | HOOK |
| 75 | BTPJRP030P23 | ROLLED PIN |
| 76 | BTPG11009101 | SPRING |
| 77 | BTPF15307701 | STOPPER |
| 78 | BTPJFW040812 | FLAT WASHER |
| 79 | BTPJHS0412BWF | HEX.SOC.HD.BOLT |
| 80 | BTPF19008502 | PAD |
| 81 | BTPJRP030P20 | ROLLED PIN |
| 98 | BTPH16409801 | SPACER |
| 99 | BTPH16409901 | SPACER |

This tool uses the following parts kits: BTPNSK1660002 & BTPNSK1230006

The following parts are included in the BTPNSK1660002 parts kit:

| | | | | | |
|----|---|---|----|----|----|
| 5 | 6 | 8 | 10 | 11 | 12 |
| 22 | | | | | |

The following parts are included in the BTPNSK1230006 parts kit:

| | | | | | |
|----|----|----|----|----|----|
| 28 | 29 | 30 | 31 | 33 | 34 |
| | | | | | |