



BT-CNR45A

BISSETT™
DRIVEN BY PROFESSIONALS

ITEM	PARTS NO	PARTS NAME
1	BTP50430101000	SCREW M5X25
2	BTP504101020800	TOP COVER
3	BTP504102009200	EXHAUST COVER
4	BTP5043010002100	SET SCREW M5
5	BTP504301009400	SCREW M5X22
6	BTP504203011700	PROTECTOR
7	BTP504101021300	BODY GUARD
8	BTP504101018900	PACKING
9	BTP504201038800	EXHUAIST VALVE
10	BTP503101033500	HEAD CAP
11	BTP504101019000	GASKET
12	BTP504305009200	O-RING 31.7X3.5
13	BTP503101033100	PISTON
14	BTP504305008500	O-RING 66*2
15	BTP504203012000	O-RING 42X2.4
16	BTP504102008300	PLATE
17	BTP504104041500	CYLINDER
18	BTP504203011900	RING
19	BTP504311005800	SPRING
20	BTP504305017600	O-RING 56.82X2.62
21	BTP504102008200	GUIDE
22	BTP504305017500	O-RING 47.3X2.62
24	BTP504102030300	BODY
25	BTP504203014900	O-RING 44*2.4
26	BTP504203010200	PISTON BUMPER
27	BTP504201036200	BUMPER SHEET
28	BTP504101019900	GASKET
29	BTP504301005500	SCREW M5*8
30	BTP504101019300	GUARD
31	BTP504103009400	NOSE
32	BTP504101019800	NOSE GUARD
33	BTP504301010200	SCREW M5X16
34	BTP5042010007800	RING
35	BTP504104044700	SPRING
36	BTP504103012701	FEEDER
37	BTP504104045600	SHAFT
38	BTP504104045100	SPRING
39	BTP503101126200	PUSHING LEVER
40	BTP5043010001300	NUT M5
41	BTP504301010200	SAFETY SCREW M5*16
42	BTP504104045900	NAIL GUIDE SHAFT
43	BTP504203012100	SHAFT RING
44	BTP504301009501	SCREW
45	BTP504104044600	ADJUSTER SPRING
46	BTP504201038700	ADJUSTER
47	BTP5043060001300	ROLL PIN D3X28
48	BTP504104045400	LOCK SHAFT
49	BTP504103010000	GUIDE LOCK
50	BTP504306003300	ROLL PIN 3*10
51	BTP504104045200	SPRING
52	BTP504301009800	SCREW M4X8
53	BTP504101019600	NAIL GUIDE COVER

ITEM	PARTS NO	PARTS NAME
54	BTP504104044800	SPRING
55	BTP504104045000	SPRING
56	BTP504103009900	NAIL STOPPER
57	BTP504103009800	MAIN NAIL STOPPER
58	BTP504103009700	NAIL GUIDE
59	BTP5043050004100	O-RING 8.8*1.9
60	BTP504104045700	FEED PISTON
61	BTP504305009400	O-RING 14X2
62	BTP504305009500	O-RING 11X2
63	BTP504101021500	PACKING
64	BTP504103009600	FEED PISTON COVER
65	BTP504301005600	SCREW M5X10
66	BTP504203011600	MAGAZINE BUSHING
67	BTP504104044900	SPRING
68	BTP504305011000	O-RING 2.8*1.9
69	BTP504201038000	PLUNGER
70	BTP504104044400	VALVE BUSHING
71	BTP504305009100	O-RING 11.5X1.5
72	BTP504311005900	TRIGGER SPRING
73	BTP504101018600	TRIGGER
74	BTP504104046100	PLUNGER
75	BTP504203011500	VALVE RUBBER COVER
76	BTP504203011800	VALVE PACKING
77	BTP504201038900	URETHANE BALL
78	BTP504101018700	VALVE PLATE
79	BTP504104041400	TRIGGER VALVE BUSHING
80	BTP504201035900	TRIGGER PLUNGER
81	BTP5043060002300	POLL PIN D3/30
82	BTP504201047400	GRIP RUBBER
83	BTP504101019100	GASKET
84	BTP504102030400	CAP
85	BTP504104046400	AIR PLUE NPT 3/8
86	BTP504304002900	WASHER
87	BTP504201038500	HOLDER CAP
88	BTP504301010000	SCREW M4X50
89	BTP504304006000	SPRING WASHER M4
90	BTP504304005800	WASHER M4
91	BTP504201038400	HOLDER SHAFT
92	BTP504201038300	NAIL HOLDER
93	BTP504104045300	RATCHET SPRING
94	BTP505010118200	NAME PLATE
95	BTP504201038200	MAGAZING
96	BTP50430302050001	U-NUT M5
97	BTP504104026500	SLEEVE
98	BTP504303000900	NYLON NUT M4
99	BTP504101021400	MAGAZING GUARD
100	BTP504101021200	GUIDE BASE
101	BTP504301008000	SCREW M5*14
102	BTP504101019700	PLATE NUT
103	BTP504101021000	SHINGLE GUIDE
104	BTP504104045800	PIN
105	BTP504201038600	MAGAZING COVER
106	BTP505010118100	WARNING LABEL

The following parts are including in the BTPCNR45AKIT1 parts kit:

12, 14 (x3), 15, 18, 20, 22, 25, 59, 61, and 62

The following parts are including in the BTPCNR45AKIT2 parts kit:

68 (x2), 71 (x3), 76, and 77