



BT-MCN38P

ITEM	PARTS NO	PARTS NAME
1	BTP32206140766	Hex.Soc.Hd.Bolt
2	BTP20790000001	Bushing,Deflector
3	BTP20790010115	Deflector,Exhaust
4	BTP30105250866	Hex.Soc.Hd.Bolt
5	BTP236500210C1	Cap
6	BTP23650130000	Cap, Gasket
7	BTP20970230001	Metal Shim
8	BTP20750140217	Piston Stopper
9	BTP20970160100	Head Valve Spring
10	BTP30700110000	O-Ring
11	BTP30700232000	O-Ring
12	BTP23650150000	Piston Head Valve
13	BTP30700018000	O-Ring
14A	BTP23650462000	Driver Assembly
15	BTP21530250017	Seal
16	BTP23650350000	Cylinder
17	BTP30700133000	O-Ring
18	BTP30700325000	O-Ring
19	BTP30700324000	O-Ring
20	BTP23650370000	Cylinder Spacer
21	BTP23650470015	Bumper
22A	BTP236506120C1	Body Assembly(Bissett)
23	BTP21630730000	Gasket
24	BTP216307400B2	End Cap
25	BTP30105200866	Hex.Soc.Hd.Bolt
26	BTP21630830009	Belt Hook
27	BTP30700246000	O-Ring
28	BTP20970840101	Cover Belt Hook
29	BTP33425000001	C-Ring
30	BTP30700079000	O-Ring
31	BTP20770900016	Valve
32	BTP30700081000	O-Ring
33	BTP30700002000	O-Ring
34	BTP30700201000	O-Ring
35	BTP20770910016	Valve Plunger
36	BTP30700071000	O-Ring
37	BTP23640960000	Spring
38	BTP30700080000	O-Ring
39	BTP20770920100	Plunger

ITEM	PARTS NO	PARTS NAME
40	BTP20770930016	Plunger Cap
41	BTP21632840115	Guide, Contact Trip
42A	BTP21630952259	Trigger Assembly
43	BTP30803260001	Spring Pin
44	BTP20770890101	Pin Trigger
45	BTP30700078000	O-Ring
46	BTP30700333000	O-Ring
47	BTP30700178000	O-Ring
48	BTP23651130066	Nose
49	BTP30106200266	Hex.Soc.Hd.Bolt
50	BTP21631540115	Guide,Safety Lever
51	BTP21631610101	Safety Guide
52	BTP21632810000	Upper Safety Lever(B)
53A	BTP23651481001	Upper Safety Lever Assy.
54	BTP21632970301	Spring
55	BTP21631490101	Spring,Safety
56	BTP30104060166	Hex.Soc.Hd.Bolt
57	BTP21633640101	Spring
58	BTP21631200000	Nail Stopper
59	BTP21631260115	Shaft Pin Nail Guide
60	BTP21633650001	Spring
61	BTP30104040166	Hex.Soc.Hd.Bolt
62	BTP21631450101	Safety Pin
63A	BTP23651521066	Safety Nose Assembly
64	BTP30104080266	Hex.Soc.Hd.Bolt
65	BTP23652070002	Nail Guide Liner
66	BTP23652050006	Magazine
67	BTP23652150015	Carriage
68	BTP23652130066	Pusher
69	BTP30803180001	Spring Pin
70	BTP21721490001	Spring, Safety
71	BTP23641750012	Fastener Stopper
72	BTP31604080166	Hex.Soc.Hd.Bolt
73	BTP21632090100	Spiral Spring
74	BTP23652180015	Magazine Cap
75	BTP23652190000	Nail Retainer
76	BTP23652170066	Bracket
77	BTP30405120166	Hex.Soc.Hd.Bolt
78	BTP30605080001	Locknut

ITEM	PARTS NO	PARTS NAME
79	BTP30900008001	Flat Washer
80	BTP30105180166	Hex.Soc.Hd.Bolt
81	BTP21631870001	Fixed Piece
82	BTP30104100566	Hex.Soc.Hd.Bolt
83	BTP23651550015	Safety Cover
84	BTP20971270001	Shaft Pin Nail Guide
85	BTP30700329000	O-Ring

MCN65PKIT1	Seal Kit
MCN65PKIT2	Trigger Assembly