



BT-PN90A		
#	Part Number	Description
1	BTP40010850237	SCREW
2	BTP20010020917	EXHAUST COVER
3	BTP40010250026	GASKET
4	BTP40010500077	O-ring 38.1*2
5	BTP40010190039	JOINT GUIDER
6	BTP40010320030	SLIDE COVER
7	BTP40010500090	O-ring 41*1.8
8	BTP40010250071	Seal ring
9	BTP40010290073	Cylinder
10	BTP40010500059	O-ring 30.1*1.8
11	BTP40010500057	O-ring 30*2.5
12	BTP20010200081	Piston Assembly
13	BTP40010190007	Bumper
14	BTP20010011209	Main Body
15	BTP40010090014	Washer
16	BTP20010340008	Restrict Siding Assembly
17	BTP40010310199	Compression Spring
18	BTP40010370014	Bushing
19	BTP40010370042	Guide bushing
20	BTP40010180010	Air plug