



BT-NCS1840A

BISSETT™
DRIVEN BY PROFESSIONALS

ITEM	PART NUMBER	PARTS NAME
1	BTP40010850185	SCREW M4*10
2	BTP40010370009	BUSHING
3	BTP40010090052	SEAL
4	BTP40010270015	EXHAUST COVER
5\6	BTP40010850396	SCREW M5*22(WASHER 5)
7	BTP20010020881	CYLINDER CAP
8	BTP40010250007	GASKET
9	BTP40010250081	VALVE SEAL
10	BTP40010310051	SPRING
11	BTP40010500022	O-RING 15.7*2
12	BTP40010260012	VALVE
13	BTP40010500082	O-RING 38.8*3
14	BTP40010500065	O-RING 33.5*3.5
15	BTP40010190043	STOPPER PAD
16	BTP40010210006	COLLAR
17	BTP40010500117	O-RING 50.5*2.5
18	BTP40010290035	CYLINDER
19	BTP40010500070	O-RING 36.3*2.5
20	BTP40010500067	O-RING 35.3*2.5
21	BTP40010500054	O-RING 28.3x3
22	BTP20010200185	PISTON ASSEMBLY
23	BTP40010190008	BUMPER
24	BTP40010250098	JOINT GUIDER
25	BTP40010130007	SAFE GUIDER
26	BTP40010310023	SPRING
27	BTP20010060126	SAFE BRACKET
28	BTP20010060006	SAFETY ASSEMBLY
29	BTP40010220070	RUBBER COVER
30	BTP40010850039	SPRING PIN
31	BTP40010250106	RECTANGULAR SEAL RING
32	BTP40010280014	TRIGGER VALVE HEAD
33	BTP40010310081	SPRING
34	BTP20010150020	TRIGGER VALVE STEM
35	BTP40010500185	O-RING 5.5*1.5
36	BTP20010280005	TRIGGER VALVE CASE
37	BTP40010500021	O-RING 15*1.9
38	BTP40010310077	SPRING

ITEM	PART NUMBER	PARTS NAME
39	BTP40010090004	WASHER
40	BTP40010050040	TRIGGER
41	BTP40010380004	TRIGGER PIN
42	BTP40010050052	TRIGGER SPRING
43	BTP40010850034	CYLINDRICAL SPRING PIN
44	BTP40010850395	LEAF SPRING ASSEMBLY
44	BTP40010310233	LEAF SPRING ASSEMBLY
45	BTP40010040093	LATCH COVER
46	BTP40010350005	LATCH SLEEVE
47	BTP40010850147	SPRING PIN
48	BTP40010850146	SPRING PIN
49	BTP20010160167	FRONT PLATE
50	BTP40010850149	CYLINDRICAL SPRING PIN
51	BTP40010850239	SCREW M5*20
52	BTP20010160082	PLATE
53	BTP40010850195	SCREW M4*16
54	BTP40010850166	CYLINDRICAL PIN
55	BTP40010850214	SCREW M4*6
56	BTP40010850350	SPRING WAHSER
57	BTP40010090040	LOCATING BLOCK
58	BTP20010300247	DRIVE GUIDE
59\68	BTP40010030207	FIXED MAGAZINE\MOVABLE MAGAZINE
60	BTP40010310201	SPRING
61	BTP20010120052	LOCK
62	BTP40010850334	CYLINDRICAL SPRING PIN
63	BTP40010850319	CYLINDRICAL SPRING PIN
64	BTP40010850335	CYLINDRICAL SPRING PIN
65	BTP40010850035	CYLINDRICAL SPRING PIN
66	BTP40010250114	JOINT GUIDE
67	BTP20010100021	FEEDER SHOE
69	BTP40010310044	SPRING
70	BTP40010120012	MAGAZINE PLATE
71	BTP40010850217	SCREW M4*8
72	BTP40010850079	NUT
73	BTP20010170021	SUPPORT
74	BTP40010850237	SCREW M5*18
75	BTP20010011154	BODY

ITEM	PART NUMBER	PARTS NAME
76	BTP40010220008	SOFT GRIP SLEEVE
77	BTP40010250031	GASKET
78	BTP20010110264	END CAP
79\80	BTP40010850376	SCREW
81	BTP40010180010	AIR PLUG